3-253-939-**11**(1)

Portable MiniDisc Recorder

Operating Instructions

Recorder Operation page 9
Software Operation page 42

NetMD MiniDisc MDLP

AM-NX1

©2003 Sony Corporation

Technical data

	Designation	Value
	Modulation	GFSK
	Operating Frequency	2403MHz~2480MHz
	channel	78channel 2.4GHz ISM Band
	Storage temperature	–20 °C ... +60 °C
	Operating temperature	0 °C ... +40 °C
Keyboard	Battery type	two alkaline batteries, type AAA
Keyboard	Supply voltage	3V(2.2~3.3V)
Keyboard	Current consumption	max. 50 mA
Dongle	Supply voltage	DC 5.0 V ±5 %
Dongle	Current consumption	max..100 mA

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

WARNING:

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

CAUTION: AVOID PROLONGED USE OF THE KEYBOARD WITHOUT BREAKS.

Take regular breaks and keep a good posture. Consult your physician promptly if you notice any loss of motion or pain in your wrist when using the keyboard.

IMPORTANT BATTERY INFORMATION

- Keep batteries out of reach of children.
- Insert the batteries in the proper direction as indicated by the positive (+) and negative (-) markings in the battery compartment.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or properly dispose of them in accordance with local and national disposal regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacturer's instructions and local and national disposal regulations. Before inserting new batteries, thoroughly clean the compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for an extended period of time without being used.

PRODUCT DISPOSAL INFORMATION

Dispose of this product in accordance with local and national disposal regulations.

Downloaded from www.Manualslib.com manuals search engine

Preface

This guide is for the networking professional who installs and manages the Ziwell AWAP08O-11gHP outdoor product, hereafter referred to as the "device". To use this guide, you should have experience working with the TCP/IP configuration and be familiar with the concepts and terminology of wireless local area networks.

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

Contents

01 Before you start

Our philosophy 6
Features 6
Checking what's in the box 6
Installing the receiver 6
Loading the batteries 6
Operating range of remote control unit 7
About using AVNavigator (included CD-ROM) 7

02 Controls and displays

Remote control 8
Display 9
Front panel 10

03 Connecting your equipment

Connecting your equipment 11
Rear panel 11
Determining the speakers' application 12
Placing the speakers 13
Connecting the speakers 13
Installing your speaker system 14
Selecting the Speaker system 15
About the audio connection 16
About the video converter 16
About HDMI 16
Connecting your TV and playback components 17
Connecting an HDD/DVD recorder, BD recorder and other video sources 19
Connecting a satellite/cable receiver or other set-top box 19
Connecting other audio components 20
Connecting additional amplifiers 20
Connecting AM/FM antennas 21
MULTI-ZONE setup 21
Connecting a SiriusConnect Tuner 22
Connecting to the network through LAN interface 22
Connecting optional *Bluetooth* ADAPTER 22
Connecting an iPod 23
Connecting a USB device 23
Connecting an HDMI-equipped component to the front panel input 23
Connecting to a wireless LAN 23
Connecting an IR receiver 23
Operating other Pioneer components with this unit's sensor 24
Switching components on and off using the 12 volt trigger 24
Plugging in the receiver 25

04 Basic Setup

Switching the speaker impedance 26
Changing the OSD display language (OSD Language) 26
Automatically conducting optimum sound tuning (Full Auto MCACC) 26
The Input Setup menu 28
Operation Mode Setup 28

05 Basic playback

Playing a source 30
Playing an iPod 30
Playing a USB device 31
Listening to the radio 33
Listening to Satellite Radio 33
Bluetooth ADAPTER for Wireless Enjoyment of Music 35

06 Listening to your system

Enjoying various types of playback using the listening modes 37
Selecting MCACC presets 39
Choosing the input signal 39
Better sound using Phase Control 39
Better sound using Phase Control and Full Band Phase Control 39

07 Playback with HOME MEDIA GALLERY inputs

Enjoying the Home Media Gallery 41
Features of Home Media Gallery 41
Introduction 41
Playback with Home Media Gallery 42
Advanced operations for Internet radio 43
Checking about the Accounts 43
About network playback 44
About playable file formats 45

08 Control with HDMI function

About the Control with HDMI function 47
Making Control with HDMI connections 47
HDMI Setup 47
Before using synchronization 48
About synchronized operations 48
Setting the PQLS function 48
Cautions on the Control with HDMI function 49

09 Using other functions

Setting the Audio options 50
Setting the Video options 52
Switching the speaker terminals 53
Using the MULTI-ZONE controls 53
Making an audio or a video recording 54
Reducing the level of an analog signal 54
Using the sleep timer 54
Dimming the display 54
Switching the HDMI output 54
Checking your system settings 55
Resetting the system 55

10 Controlling the rest of your system

About the Remote Setup menu 56
Operating multiple receivers 56
Setting the remote to control other components 56
Selecting preset codes directly 56
Programming signals from other remote controls 57
Erasing one of the remote control button settings 57
Erasing all learnt settings that are in one input function 57
Direct function 57
Setting the backlight mode 58
Multi Operation and System Off 58
Resetting the remote control settings 59
Controlling components 59

11 The Advanced MCACC menu

Making receiver settings from the Advanced MCACC menu 62
Automatic MCACC (Expert) 62
Manual MCACC setup 64
Checking MCACC Data 66
Data Management 67

12 The System Setup and Other Setup menus

Making receiver settings from the System Setup menu 69
Manual speaker setup 69
Network Setup menu 71
Checking the Network Information 73
The Other Setup menu 73

13 Additional information

Troubleshooting 1 76
Troubleshooting 2 82
Troubleshooting of wireless LAN 85
About status messages 86
Speaker Setting Guide 86
Important information regarding the HDMI connection 87
Cleaning the unit 87
Surround sound formats 88
About THX 88
About iPod 89
About SIRIUS 89
About FLAC 89
Auto Surround, ALC and Stream Direct with different input signal formats 90
Glossary 91
Features index 94
Specifications 95
Preset code list 96

Essentials

Basic Gestures

Basic Gestures

Air Gestures

You can use gestures to take screenshots and scroll without touching the screen.

Go to **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Air gestures**, and ensure that **Air scroll** and **Grabshot** are enabled.

	**Air scroll** To air scroll, do the following: Scroll down: Hold your hand half an arm's length away from the screen, with the palm of the hand facing the screen, and your fingers pointing upwards. After appears at the top of the screen, move your hand downwards to begin scrolling. Scroll up: Hold your hand half an arm's length away from the screen, with the back of the hand facing the screen, and your fingers pointing downwards. After appears at the top of the screen, move your hand upwards to begin scrolling.
	Take a grabshot Place your hand half an arm's length away from the screen with the palm of the hand facing the screen, and wait for to appear at the top of the screen. Then close your fist to capture a screenshot.

System Navigation Gestures

Go to **Settings** > **System & updates** > **System navigation** and ensure that **Gestures** is selected.

	Back Swipe inward from the left or right edge to return to the previous screen.

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

Potentially explosive environments

Switch off your device in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

IT Equipment Recycling Information

Acer is strongly committed to environmental protection and views recycling, in the form of salvaging and disposal of used equipment, as one of the company's top priorities in minimizing the burden placed on the environment.

We at Acer are very conscious of the environmental effects of our business and strive to identify and provide the best working procedures to reduce the environmental impact of our products.

For more information and help when recycling, please go to this website:

http://www.acer-group.com/public/Sustainability/

Visit www.acer-group.com for further information on the features and benefits of our other products.

Disposal instructions

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit http://www.acer-group.com/public/Sustainability/

Downloaded from www.Manualslib.com manuals search engine

2. INSTALLATIE

Eerste installatie

1 Dpen de batterijhouder van de afstandsbediening en plaats de batterijen zoals aangegeven.

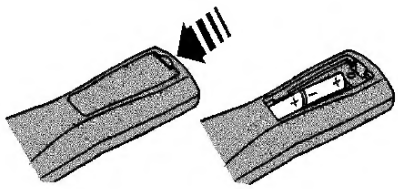

2 Sluit de batterijhouder.

3 Kies met de P−↓ of de P+↑ -toets de gewenste taal voor de beeldscherm-informatie (DSD).

4 Bevestig met de OK -toets.

5 Kies met de P−↓ of P+↑ -toets het land waarin u zich bevindt.
Als dat land niet verschijnt, kies dan 'AND . '.

6 Bevestig met de OK -toets.

7 Als de antenne aan de TV-VIDED Combi aangesloten is en de radio-antenne is afgestemd, druk dan op de OK -toets.
'Automatisch TV-zenders zoeken' begint. Dp het beeldscherm verschijnt:

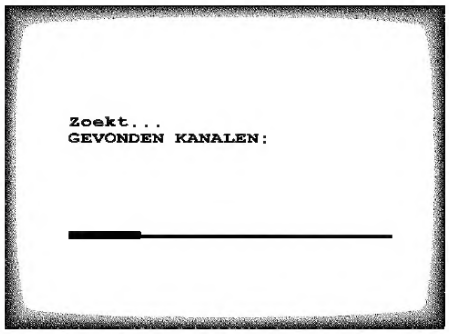

Wacht tot alle zenders zijn gevonden. Dat kan een paar minuten duren.

☐ Vervolgens verschijnen ter controle 'Tijd', 'Jaar', 'Maand' en 'Datum'.

8 Verander, indien nodig, in de regel 'Tijd', de tijd met de cijfertoetsen 0-9 van de afstandsbediening.

9 Controleer op dezelfde manier 'Jaar', 'Maand' en 'Datum'. U kunt tussen de regels wisselen met de P−↓ of P+↑ -toets.

10 Bevestig iedere regel die u veranderd heeft met de OK -toets.
De eerste installatie is nu afgesloten.

ⓘ Als u een decoder heeft aangesloten, dan leest u in de volgende paragraaf hoe u deze moet installeren.

ⓘ Als u een satelliet heeft aangesloten, lees dan de paragraaf 'Satelliet ontvanger'.

NL

Downloaded from www.Manualslib.com manuals search engine

English

Right view

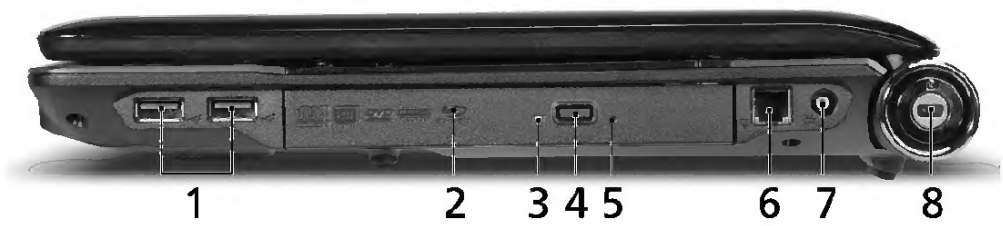

#	Icon	Item	Description
1		USB 2.0 port	Connects to USB 2.0 devices (e.g., USB mouse, USB camera).
2		Optical drive	Internal optical drive; accepts CDs or DVDs.
3		Optical disk access indicator	Lights up when the optical drive is active.
4		Optical drive eject button	Ejects the optical disk from the drive.
5		Emergency eject hole	Ejects the optical drive tray when the computer is turned off. **Note:** Insert a paper clip to the emergency eject hole to eject the optical drive tray when the computer is off.
6		Modem (RJ-11) port	Connects to a phone line.
7		RF-in port	Accepts input signals from digital TV-tuner devices. (only for certain models)
8		Kensington lock slot	Connects to a Kensington-compatible computer security lock.

Downloaded from www.Manualslib.com manuals search engine

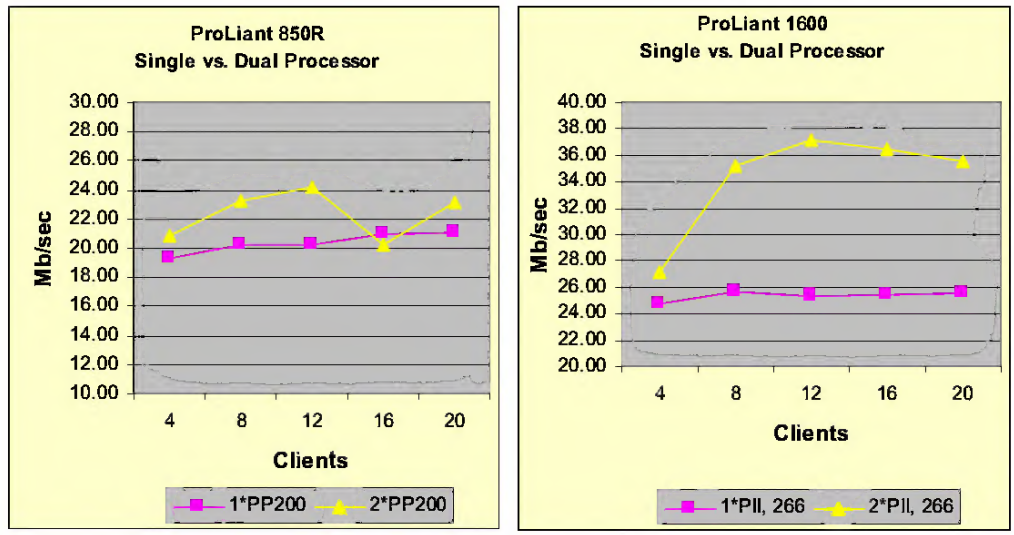

Figure 3. ProLiant 850R and 1600, single versus dual processor

Enabling the Fastpath Option

Fastpath is a new feature of AXENT Raptor Firewall that allows it to act on packets at the network level (like a packet filter) rather than at the application level. This option can he applied on a per-rule hasis and dramatically improves data throughput.

When Fastpath was applied for packets travelling from the inside network to the outside network (laheled "One way" in Figure 4), throughput increased eleven percent. When Fastpath was applied for all traffic, throughput increased hy 26.8 percent. In fact, data throughput of fifty mbps was achieved when hi-directional Fastpath was applied to the ProLiant 1600 with a single 400-MHz processor ("hi-directional" means data travelling into and out of the protected network).

The increased throughput mentioned ahove comes at the cost of decreased security. A warning is displayed when the Fastpath option is selected, and the option should he used only after careful consideration of the risks. It is recommended that the Fastpath option not he used for incoming traffic from the Internet.

Downloaded from www.Manualslib.com manuals search engine

Important notes regarding operation

Danger: High voltage!
Do not remove the top cover as there is a risk of an electrical shock!

The video recorder does not contain any components that can be repaired by the customer. Please leave all maintenance work for qualified personnel.

As soon as the video recorder is connected to the power supply, there are some components that are in constant operation. To switch off the video recorder completely you must disconnect it from the power supply.

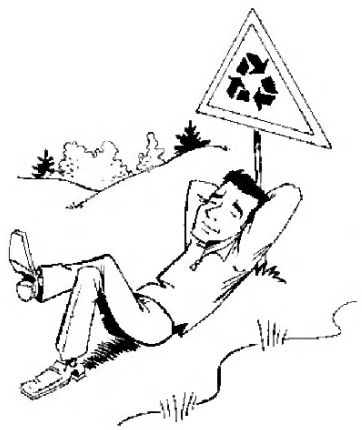

These operating instructions have been printed on non-polluting paper.

Deposit old batteries at the appropriate collection points.

Please make use of the facilities available in your country for disposing of the packaging of the video recorder in a way that helps to protect the environment.

This electronic device contains many materials that can be recycled. Please enquire about the possibilities for recycling your old device.

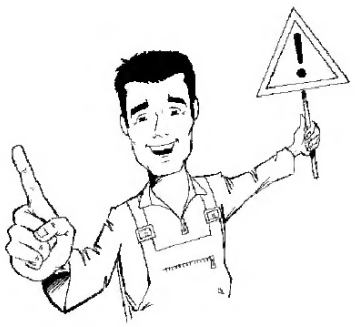

Make sure that air can circulate freely through the ventilation slots on the video recorder. Do not place the device on an unsteady base.

Make sure that no objects or liquids enter the video recorder. Do not place vases or the like on the video recorder. If liquid is spilt into it, immediately disconnect the video recorder from the power supply and call After-sales Service for advice.

Do not place any combustible objects on the device (candles, etc.).

Make sure that children do not place any foreign objects within the openings or ventilation slots.

Downloaded from www.Manualslib.com manuals search engine

3. Description about Circuit

Block Diagram of Operating Principle

The system architecture of 2BW041 is illustrated in Figure 2-1:

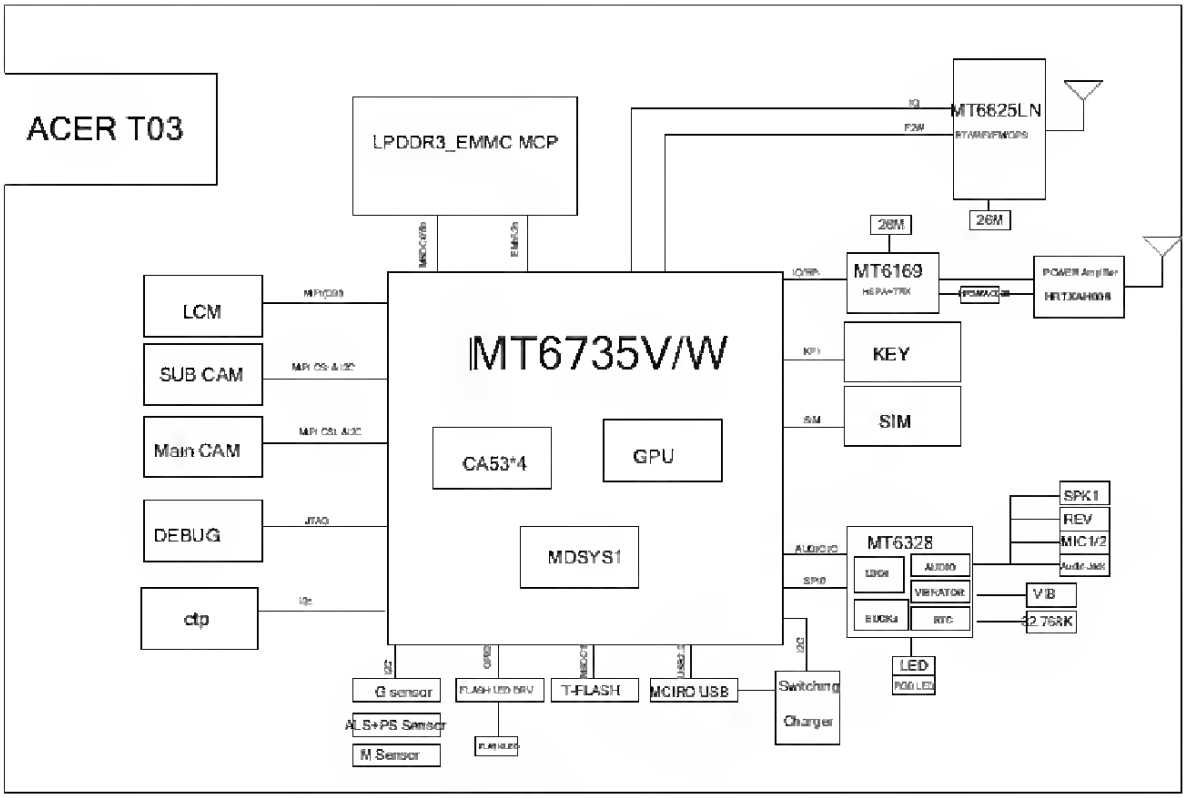

Figure 2-1 System architecture of 2BW041

Based on MTK platform design, 2BW041 is mainly composed of Baseband,RF ,PMU, IO, and other modules.

Featuring a quad core ARM® Cortex-A53 based kernel, MT6735 baseband module features across-the-aboard peripheral interfaces and achieves seamless integration of audio frequency, SIM card, T Flash card, Keyboard and other peripheral equipments. The storage structure of 2BW041 is composed of DDR,EMMC flash and T-Flash.

RF module adopt MT6169 as transceiver (2G/3G/4G) , improved the performance of RF feature and saved much more place of motherboard. and adopt RF3233 as 2G PA with antenna switch, ACPM-5401-TR1、ACPM-5408-TR1B as 3G PA.

LCM adopts ,5.5" 1280 (RGB) ×720,16Mcolor LTPS TFT LCD module with Independent series backlight driver IC.

Human-Interface composed of Multipoint Capacitive Touch Panel with 3 touch key, Sidekey(Powerkey

Downloaded from www.Manualslib.com manuals search engine

Automatic shut off

The dehumidifier will turn off automatically when the bucket is full, or when the bucket is removed or not replaced in the proper position.

The bucket must be replaced in the proper position for the dehumidifier to work. The light will be on and the dehumidifier will not run if the bucket is not in the proper position.

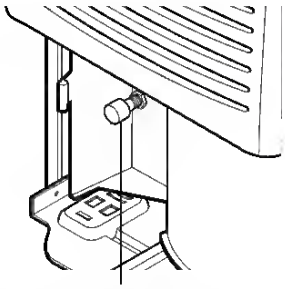

Water level control switch

Disposing of collected water

1. Empty the bucket manually.

When the bucket is full, pull out by grasping the handle and empty it into a large sink or tub and then replace it properly.

NOTICE **Do not remove while operating the dehumidifier.**
It can cause water to drop on the base pan or the floor.
Empty the bucket when the indicator light turns on.

NOTICE **It is advisable to carry the bucket by supporting it from the bottom as well as by the handle. Carrying by only the handle may cause the handle or bucket cover to break.**

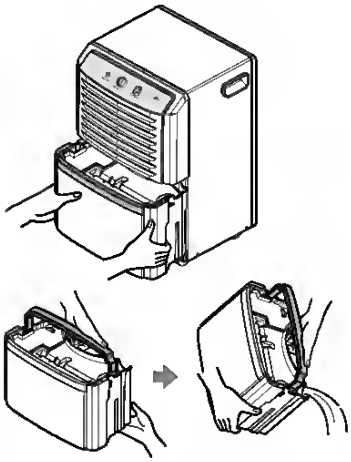

2. Attach a length of garden hose to the threaded drain hose connection to carry water to the drain.

1 Connect a garden hose to the threaded drain hose connector (Fig1)

2 Remove the drain-hole cover. (Fig2)

3 Push hose connector tightly into the drain-hole on Rear Grille (Fig3-1,3-2)

4 Press the hose down and make sure the "Arrow" is pointing upward (Fig4-1,4-2)

5 The connection should be resemble Fig5 when complete.

NOTICE **The hose attachment will accept a standard garden hose fitting.**
Do not over tighten the hose when connecting it to the hose connector, use a rubber washer and tighten by hand firmly without stripping the plastic threads.

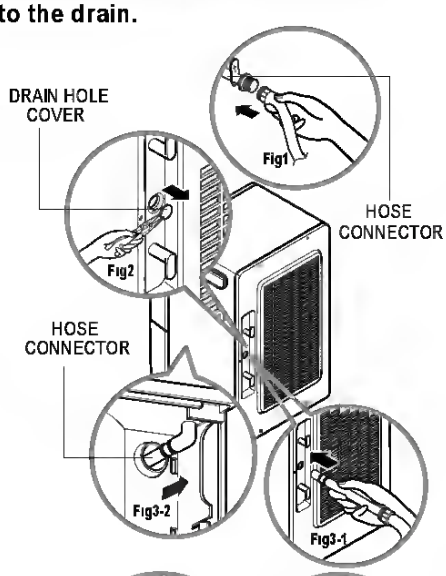

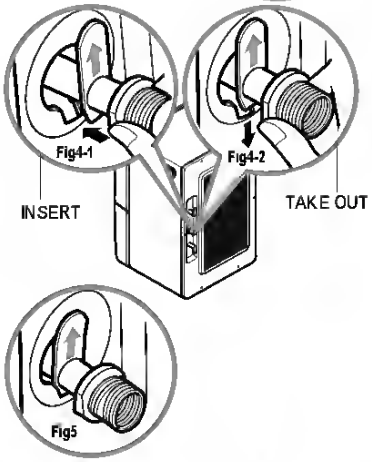

When being attached to hose connector drain hose connection, do not bend or kink the hose The hose should lie flat fom the dehumidifier to the drain

Downloaded from www.Manualslib.com manuals search engine

For more information

For additional information, refer to the resources listed below.

Resource description	Web address
HP and Citrix Global Alliance	http://www.hp.com/solutions/citrix
HP BladeSystem – Citrix Solutions	http://www.hp.com/products/blades/solutions/solutions-citrix.html
HP Virtual Desktop Infrastructure	http://www.hp.com/go/vdi
HP Integrated Citrix XenServer	http://www.hp.com/go/vdi/citrix
HP ActiveAnswers paper "Virtualization with Citrix XenServer Enterprise Edition v4 on HP ProLiant servers"	http://h71019.www7.hp.com/ActiveAnswers/library/GetPage.aspx?pageid=581607&statusid=0&audienceid=0&ccid=225&langid=121
HP ActiveAnswers for Citrix	http://www.hp.com/solutions/activeanswers/hpsbc
HP BladeSystem platforms	http://www.hp.com/go/bladesystem
HP ProLiant servers	http://www.hp.com/go/proliant
HP integrated Citrix XenServer for HP ProLiant servers white paper	http://h71028.www7.hp.com/ERC/downloads/4AA1-9074ENW.pdf?jumpid=reg_R1002_USEN
Getting Started with Citrix XenDesktop	http://support.citrix.com/article/CTX116931
HP Virtual Desktop Infrastructure with Citrix XenDesktop Getting Started Guide	http://h20000.www2.hp.com/bizsupport/TechSupport/Home.jsp?lang=en&cc=us&prodTypeId=18964&prodSeriesId=3801993

Call to action

Send comments about this paper to TechCom@HP.com.

© 2008 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

TC081007IN, October 2008

Downloaded from www.Manualslib.com manuals search engine

What to do if

If your appliance fails to work properly please carry out the following checks.

Symptom	Solution
The cooker hood will not start...	Check that: The hood is connected to the electricity supply. Check that a fan speed has been selected
The cooker hood is not working	Check that: The fan speed is set high enough for the task. The grease filters are clean. The kitchen is adequately vented to allow the entry of fresh air. If set up for recirculation, check that the charcoal filter is still effective. If set up for extraction, check that the ducting and outlets are not blocked.
The cooker hood has switched off during operation...	The safety cut-out device has been tripped. Turn off the hob and then wait for the device to reset. If the hood has been installed below the heights indicated in the installation instructions the motor will cut-out frequently which will damage the hood.

If after all these checks, the problem persists, contact your local Service Force Centre, quoting the model and serial number.
Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.
In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Special accessories

Charcoal filter TYPE 20

Downloaded from www.Manualslib.com manuals search engine

02

Using CoPilot Live

Selecting a Destination Using Lat and Long

If you know the latitude and longitude of your destination you can enter them directly.

- Click **Menu > Destination** > > **Coordinates**
- Choose to set the latitude and longitude in Degrees Minutes Seconds, Decimal Degrees or Decimal Minutes.
- Enter a latitude and longitude in the appropriate format depending on which one you selected.

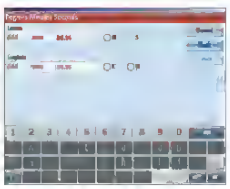

CoPilot will take a few moments to find the point. When it is located a map will appear with the location pinpointed by a red arrow.

- Select **Drive** to begin navigating your route.

Choosing a Saved Trip

If you already have a saved trip that you want to use, you can access it quickly.

- Click **Menu** > **Destination** > **Dpen Saved Trip**. For details on saving a planned trip, see page 18.

Saving Your Current Location

If you are outside and have a GPS fix, you can save your current location.

- Click **Menu** > > **Save Current Location**.
- Enter a name for the destination and click **Save**.
- The location will be saved in your Favorites list, where it can be accessed as a destination in the future.

Dther Ways to Select a Destination

You can save locations as Home and Work for one-click address entry, see page 24. In addition, CoPilot lets you save your Favorite destinations so you can access them quickly, see page 25.

Downloaded from www.Manualslib.com manuals search engine

9. Press "Yes" to keep the newer files.
10. If the Microsoft ISDN Accelerator Pack 1.1 or Dial-Up Networking 1.2 is not installed before, you should see the following screen.

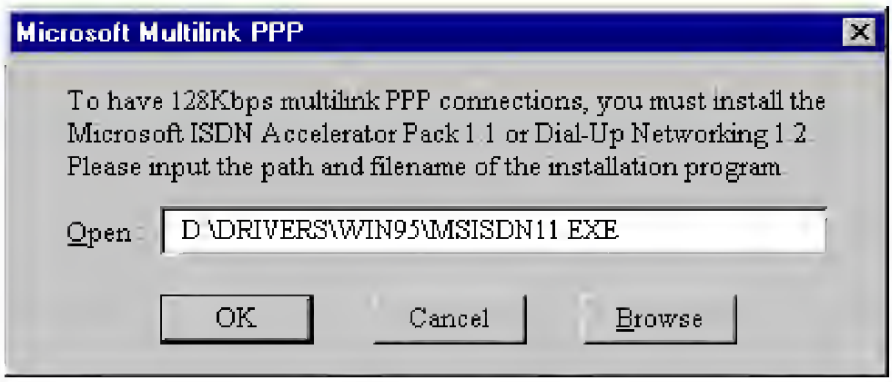
Microsoft Multilink PPP
To have 128Kbps multilink PPP connections, you must install the Microsoft ISDN Accelerator Pack 1.1 or Dial-Up Networking 1.2
Please input the path and filename of the installation program
Open
D:\DRIVERS\WIN95\MSISDN11.EXE
OK
Cancel
Browse

FIGURE 2-7: INSTALLING THE MULTILINK PPP FROM MICROSOFT

11. For more details about multilink PPP, please refer to Section 2.6, *Using Multilink in Windows 95.*
12. After installing the Microsoft ISDN Accelerator Pack 1.1 or Dial-Up Networking 1.2, you will be prompted to restart the computer.

System Settings Change
To finish setting up your new hardware, you must restart your computer.
Do you want to restart your computer now?
Yes
No

FIGURE 2-8: RESTARTING THE COMPUTER

Downloaded from www.Manualslib.com manuals search engine

ITEM	LABEL	DESCRIPTION	SEE PAGE
1.	IR Transmitter	Transmits signals to projector.	
2.	Power ON	Turns the projector on	13
3.	RATIO	Displays the ASPECT RATIO selections	
4.	TEST PATTERN	Toggle on / off test pattern	
5.	▲	Navigates and changes settings in the OSD Quick Menu – For Keystone	21
6.	MODE	Toggle a preset display mode.	
7.	◀	Navigates and changes settings in the OSD	
8.	BACK	Goes back to previous OSD menu.	
9.	▼	Navigates and changes settings in the OSD Quick Menu – For Keystone	21
10.	Laser	Press to operate the on-screen pointer. **DO NOT POINT IN EYES.**	
11.	DVI	Displays the DVI source selection	
12.	HDMI	Displays the HDMI source selection	
13.	COMP	Displays the Component source selection	
14.	VIDEO	Displays the VIDEO source selection	
15.	1/USER1	Menu on: Number for Remote ID or password setting used. Menu off: Hot key function of USER1 on OSD.	
16.	2/USER2	Menu on: Number for Remote ID or password setting used. Menu off: Hot key function of USER2 on OSD.	
17.	4/HIDE	Menu on: Number for Remote ID or password setting used. Menu off: Press the button to hide video and audio.	
18.	7	Number for Remote ID or password setting used.	
19.	ALL	All number for Remote ID setting used.	
20.	0/HELP	Menu on: Number for Remote ID or password setting used. Menu off: Press the button to display ID number of this remote	
21.	Laser	Use as on-screen pointer. **DO NOT POINT IN EYES.**	
22.	Power OFF	Turns the projector off	13
23.	SOURCE	Alternate input source	21
24.	RESYNC	Toggle auto-tracking image function	
25.	↵	Enters and confirms settings in the OSD	
26.	▶	Navigates and changes settings in the OSD	
27.	MENU	Opens or closed the OSD	
28.	VGA	Displays the VGA source selection	
29.	DP	Displays the DisplayPort source selection	
30.	3/USER3	Menu on: Number for Remote ID or password setting used. Menu off: Hot key function of USER3 on OSD.	
31.	5/FREEZE	Menu on: Number for Remote ID or password setting used. Menu off: Freezes/unfreezes the on-screen picture	
32.	6	Number for Remote ID or password setting used.	

Downloaded from www.Manualslib.com manuals search engine

Parallel Interface Pin Assignments

Pin No.	Signal Name	Signal Direction	Compatible	Nibble	ECP	Functions
1	Data Strobe	To printer	nStrobe	Host Clk	Host Clk	Parallel data sampling strobe
2-8	Data Bit n	To printer	Data n (LSB)	Data n (LSB)	Data n (LSB)	Parallel input data
9	Data Bit 8	To printer	Data 8 (MSB)	Data 8 (MSB)	Data 8 (MSB)	Parallel input data
10	Acknowledge	From printer	nAck	PtrClk	PeriphClk	Completion of data input or end of functioning
11	Busy	From printer	Busy	PtrBusy	PeriphAck	During print processing or during alarm
12	Paper End	From printer	PError	AckDataReq	nAckReverse	End of paper
13	Select	From printer	Select	Xflag	Xflag	Select state (on-line)
14	Auto Feed	To printer	nAutoFd	HostBusy	HostAck	Request to change mode
15	-	-	-	-	-	(not used)
16	0V	-	Logic Gnd	Logic Gnd	Logic Gnd	Signal ground
17	Chassis Ground	-	Chassis Gnd	Chassis Gnd	Chassis Gnd	Chassis ground
18	+5V	From printer	Peripheral Logic High	Peripheral Logic High	Peripheral Logic High	50 mA max.
19	0V	-	Signal Ground (nStrobe)	Signal Ground (nStrobe)	Signal Ground (nStrobe)	Signal ground
20 to 27	0V	-	Signal Ground (Data 1-8)	(Data 1-8)	(Data 1-8)	Signal ground
28	0V	-	Signal Ground (PError, Select, nAck)	Signal Ground (PError, Select, nAck)	Signal Ground (PError, Select, nAck)	Signal ground
29	0V	-	Signal Ground (Busy, nFault)	Signal Ground (Busy, nFault)	Signal Ground (Busy, nFault)	Signal ground
30	0V	-	Signal Ground (nAutoFd, nSelectIn, nInit)	Signal Ground (nAutoFd, nSelectIn, nInit)	Signal Ground (nAutoFd, nSelectIn, nInit)	Signal ground
31	Input PRIME	To printer	nInit	nInit	nReverseReq	Initializing signal
32	Fault	From printer	nFault	nDataAvail	nPerophReq	Paper out or during alarm
33	0V	-	-	-	-	Signal ground
34	-	-	-	-	-	-
35	-	From printer	-	-	-	Fix at Logic "1"
36	Select In	To printer	nSelectIn	1284 Active	1284 Active	Request to change Mode

Downloaded from www.Manualslib.com manuals search engine

S-Registers

Register	Function	Range/units	Default
S0	Auto answer ring number	0-255/rings	0
S1	Ring counter	0-255/rings	0
S2	AT escape character	0-255/ASCII	43
S3	Command line termination character	0-127/ASCII	13
S4	Response formatting character	0-127/ASCII	10
S5	Command line editing character	0-32, 127/ASCII	8
S6	Wait before dialing	2-65/seconds	2
S7	Connection completion time-out	1-255/seconds	50
S8	Comma dial modifier time	0-65/seconds	2
S10	Automatic disconnect delay	1-254/ 1 seconds	20
S11	DTMF dialing speed	50-150/.001 seconds	95
S12	Escape guard time	0-255/.02 seconds	50
S28	V.34 modulation enable/disable	0-255	1
S30	Inactivity timer	0-255/minutes	0
S35	Data calling tone	0-1	0
S36	Negotiation fallback		7
S37	Dial line rate		0
S38	56K dial line rate	0-16	0
S42	Auto rate	0-1	1
S43	Auto mode	0-1	1
S48	LAPM error control and feature negotiation		7
S89	Timer to control sleep mode	0,5-255	10
S90	Local phone status	0-1	
S91	Line transmit level	6-15/1dB	15

Downloaded from www.Manualslib.com manuals search engine

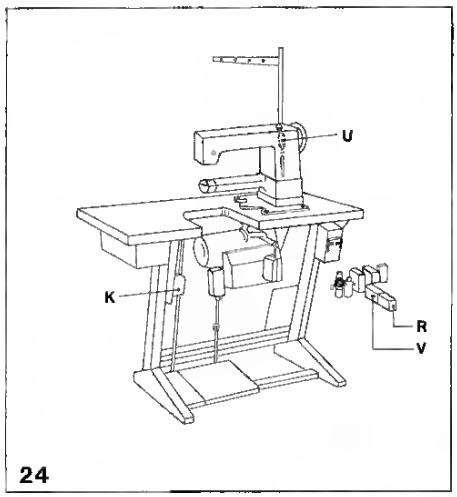

24

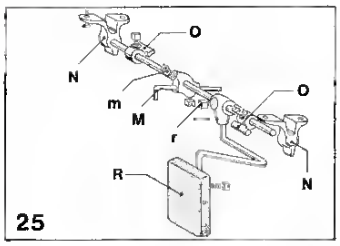

25

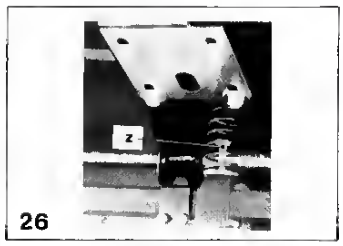

26

Downloaded from www.Manualslib.com manuals search engine

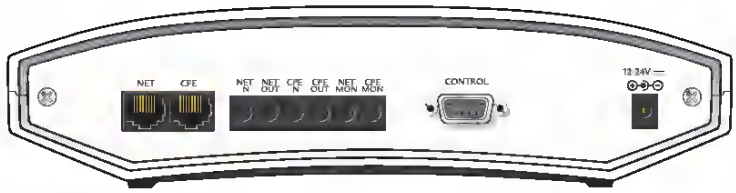

Figure 1-3. T1 ESF CSU Rear View

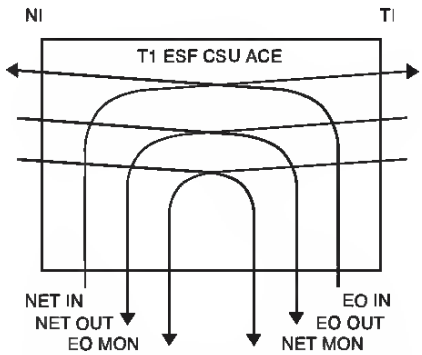

Figure 1-4. Jack Signal Directions

Features

The following features give the T1 ESF CSU ACE many advantages over other products of its kind:

- Smallest T1 ESF CSU ACE in the industry.
- Front panel interface eliminates the need for a terminal to configure the T1 ESF CSU ACE.
- Automatic ESF to D4 frame conversion.
- Wall mount NEC Class 2, 12 VDC power supply eliminates the need for an external power supply.
- Can be wall mounted to virtually any surface. There are rubber feet on the unit for use on a table top.
- Can configure a modem so that it does not have to be configured before installation.
- Backs up configuration data in EEPROM.

© 2004 ADTRAN, Inc

Downloaded from www.Manualslib.com manuals search engine

AIWA CO.,LTD.

http://www.aiwa.co.jp

Downloaded from www.Manualslib.com manuals search engine

The AUTO Lack feature can black progromming based an the Mavie Industry ratings.

Once yau've entered yaur access cade and the AUTO Lack features are displayed an the screen:

1 Press the MENU button to see the onscreen menu.

2 Press the CURSOR DOWN button to highlight the FEATURES menu, then press the CURSOR RIGHT to enter.

3 Press the CURSOR DOWN button to select AUTO LOCK, then press CRUSOR RIGHT to enter. ACCESS CODE will appear on the screen.

4 Please use the Number buttons to enter your 4 digits access code.

5 Press the CURSOR DOWN button to select MOVIE RATING, then press CURSOR RIGHT to enter.

6 Press the CURSOR DOWN button to highlight any of the Movie Rating options. When highlighted, all these options can be (ON) blocked or (OFF) unblocked.

7 Press MENU repeatedly to remove the menu from the screen.

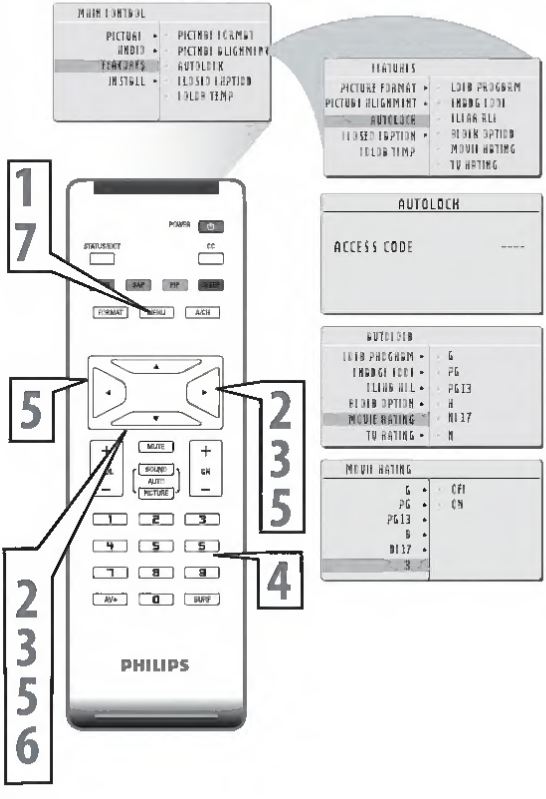

HELPFUL HINT

When a rating is chosen to be blocked, any higher level rating will also be blocked from viewing. (i.e.: If "R" is selected to be blocked, NC-17 and X will automatically be blocked.)
When a rating is set to unblock, only the selected rating will be unblocked (Ratings lower will not automatically be unblocked.)

Connecting the Terminal Equipment

After successfully powering up the NT1 ACE, the POWER and ERROR indicators should be on and the READY indicator should be flashing. Make sure that terminal equipment (TE) is properly terminated as instructed in *Setting the Option Switches* on page 4. Plug the TE into one of the Local Bus connectors at the rear of the unit. A second TE may be plugged into the remaining Local Bus connector. If more than two TEs need to be connected to the NT1 ACE, additional connections can be made in parallel to the S/ T bus using RJ-45 connectors.

.TEs commonly have additional jacks wired in parallel. These may be used to connect more than two TEs as provided for by the NT1 ACE. See the TE documentation for further information.

After the TE powers up, the ERROR indicator should go out. There may be some delay between plugging in the TE and the ERROR indicator going out, depending on the specific TE in use. If the ERROR indicator fails to go out, see the section *Troubleshooting* on page 11.

As the ERROR indicator extinguishes, the READY indicator should illuminate. The TE will now be ready to place and receive calls. There may be a slight delay between the appearance of the READY indicator and the TE's ability to place and receive calls, depending on the specific TE in use. If the READY indicator fails to illuminate or if you are unable to place or receive calls, see the section *Troubleshooting* on page 11.

Downloaded from www.Manualslib.com manuals search engine

Step2: Right click the "Unplug or Eject Hardware" icon on your task bar.

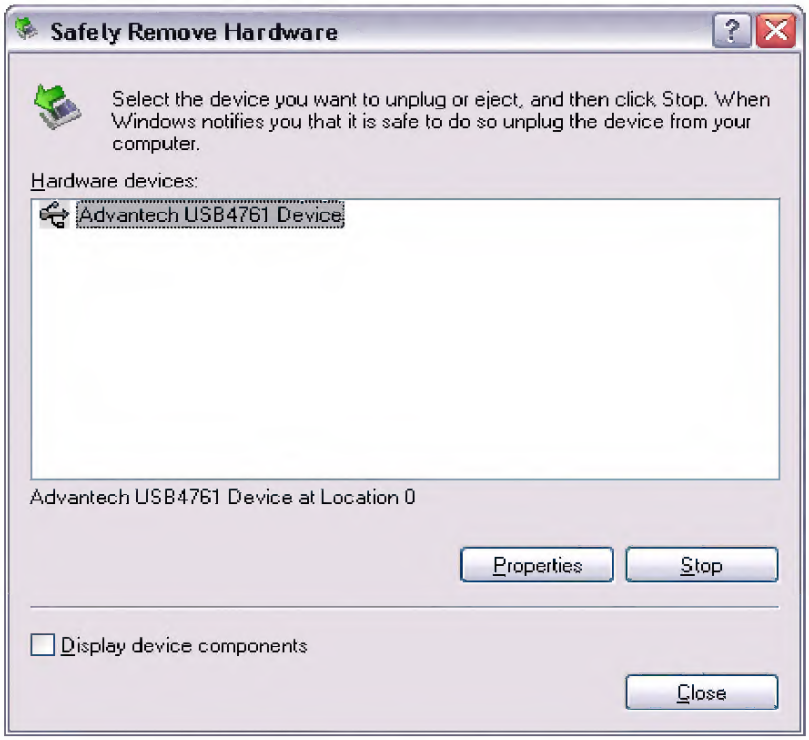
Safely Remove Hardware
Select the device you want to unplug or eject, and then click Stop. When Windows notifies you that it is safe to do so unplug the device from your computer.
Hardware devices:
Advantech USB4761 Device
Advantech USB4761 Device at Location 0
Properties
Stop
Display device components
Close

Figure 2.8: Unplug or Eject Hardware Dialog

Step3: Select "Advantech USB4711 Device" and press "Stop" Button.

Stop a Hardware device
Confirm devices to be stopped, Choose OK to continue.
Windows will attempt to stop the following devices. After the devices are stopped they may be removed safely.
Advantech USB4761 Device
OK
Cancel

Figure 2.9: Stop a Hardware device dialog box

Downloaded from www.Manualslib.com manuals search engine